


DATA SHEET

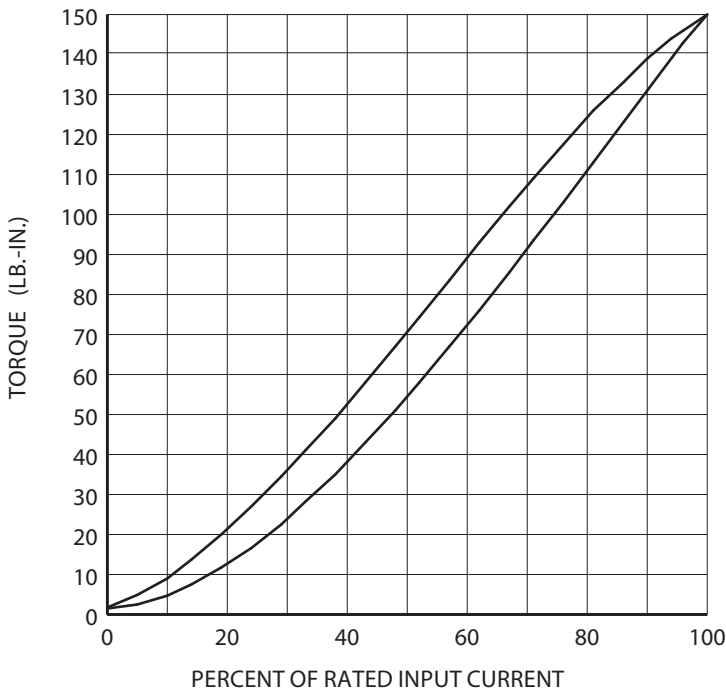

**CHARACTERISTICS** - With no electrical excitation, the shaft freely rotates. With electrical excitation, the shaft becomes coupled to the housing. Torque is proportional to input current (see torque graph), and independent of RPM. While the load torque is less than the output torque, the shaft won't rotate. When the load torque is increased, the brake will slip smoothly at the torque level set by the coil input current.

- Torque range . . . . . 3 to 150 lb.-in.
- Maximum RPM . . . . . 1300 RPM
- Maximum heat dissipation . . . . . 80 watts
- Maximum case temperature . . . . . 160 degrees F
- Maximum overhung load . . . . . 120 lbs.
- Shaft inertia . . . . .  $15 \times 10^{-4}$  lb.-in.-sec<sup>2</sup>
- Response (unforced) . . . . . 130 mSec.
- Response (forced) . . . . . 65 mSec.
- Weight . . . . . 12 lbs.

← Use the lower curve when approaching a current value from 0 amps. Use the upper curve when approaching a current value from 100% rated current.

	6 V	12 V	24 V	90 V
COIL RESISTANCE (ohms)	3.4	13.5	55	600
100% INPUT CURRENT (amps)	1.7	0.85	0.42	0.14

← Rated D.C. coil voltages available: 6 VDC (yellow leads), 12 VDC (green leads), 24 VDC (red leads), 90 VDC (blue leads).

**BRAKE PERFORMANCE**

**TORQUE:** At the rated voltage, the brake will draw 100% of the rated input current. Output torque will be 150 lb.-in.

**POWER SUPPLY:** A "constant-current" D.C. power supply is recommended for the best accuracy in open-loop control systems. This type of power supply will maintain a fixed (but adjustable) output current, regardless of the temperature of the brake, so output torque is constant (but adjustable).

**HEAT DISSIPATION:** The brake can dissipate 80 slip (thermal) watts continuously. For continuous slip, calculate the heat input by the formula :

$$\text{HEAT (watts)} = \text{RPM} \times \text{TORQUE (lb.-in.)} \times 0.012$$

Using the above formula: At rated torque, the maximum continuous slip RPM is 44. The brake can dissipate higher amounts of heat for short periods of time, but the average must not exceed 80 watts. The case temperature must never exceed 160 degrees F.

**INSTALLATION INFORMATION**

Do not drop, or strike with a hammer. Keep away from fine metal filings and fine metal chips. Shield from liquids.

Do not attempt to remove the brake shaft or retaining rings.

All pulleys, sprockets, couplings, thru-shafts (hollow shaft models), etc. must mount as slide fits. Use a puller to remove stuck components. Never pry or hammer to install or remove components.

**Solid Shaft Models:** Center your set-screw on the flat of the brake shaft.

**Hollow Shaft Models:** Never tighten the set screws of the clamp ring without the thru-shaft installed. Tighten set screws to 70 in.-lbs.

Always use a flexible coupling when connecting the shaft of a rigidly mounted brake to the shaft of another rigidly mounted device. Precisely align both shafts.

Always electrically ground the brake.