
## DATA SHEET

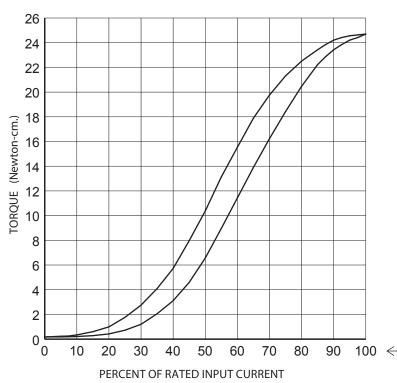

COILS (volts D.C.) 12 V		24 V	90V	
COIL RESISTANCE (ohms)	31	113	1470	
100% INPUT CURRENT (amps)	0.34	0.19	0.052	

CHARACTERISTICS - With no electrical excitation, the shaft freely rotates. With electrical excitation, the shaft becomes coupled to the housing. Torque is proportional to input current (see torque graph), and independent of RPM. While the load torque is less than the output torque, the shaft won't rotate. When the load torque is increased, the brake will slip smoothly at the torque level set by the coil input current.

Tensioning torque is exceptionally smooth under virtually all conditions due to the unique auto-decogging feature. To decog, simply rotate the shaft 1 revolution.

Torque range 0.43 to 24	.7	Newton-cm.
Maximum RPM 800	0	RPM
Max. heat dissipation with cover	. 15	watts
Max. heat dissipation, no cover	25	watts
Maximum case temperature	75	degrees C
Maximum overhung load		kg.
Shaft inertia	0 x 10 <sup>-6</sup>	kg-m <sup>2</sup>
Response (unforced)	20	mSec.
Weight	900	grams

0% thru 100% of rated input current can be dialed in directly on a Placid Ind. 12 volt constant current power supply (P/N PS-12-MC). The output torque can be determined using the graph.

Use the lower curve when approaching a current value from 0 amps. Use the upper curve when approaching the current value from 100% rated current.

## **BRAKE PERFORMANCE**

TORQUE: At 100% input current, output torque will be 24.7 Newton-cm.

POWER SUPPLY: A "constant-current" D.C. power supply is recommended for the best accuracy in open-loop control systems. This type of power supply will maintain a fixed (but adjustable) output current, regardless of the temperature of the brake, so output torque is constant (but adjustable).

HEAT DISSIPATION: The brake can dissipate 15 slip (thermal) watts continuously. (25 slip watts without the cover). For continuous slip, calculate the heat input by the formula:

HEAT (watts) = RPM x TORQUE (N-cm.) / 960

Using the above formula: At rated torque, the maximum continuous slip RPM is 580 (970 without the cover). The brake can dissipate higher amounts of heat for short periods of time, but the average must not exceed 15 watts (25 watts without the cover). The case temperature must never exceed 75 degrees C.

## INSTALLATION INFORMATION

Do not drop, or strike with a hammer. Keep away from fine metal filings and fine metal chips. Shield from liquids.

Do not attempt to remove the brake shaft or retaining rings.

All pulleys, sprockets, couplings, etc. must mount as slide fits. Use a puller to remove stuck components. Never pry or hammer to install or remove components.

Shaft without a flat: Use a clamp-type coupling.

Shaft with a flat: Center your set-screw on the flat.

Always use a flexible coupling when connecting the shaft of a rigidly mounted brake to the shaft of another rigidly mounted device. Precisely align both shafts.

To avoid danger of electrical shock, always electrically ground the brake.



Magnetic Particle Brakes & Clutches Hysteresis Brakes & Controls 1580 Lake Street • Elmira, NY 14901 • USA 518-523-2422 • 866-523-2423 • Fax: 518-523-2746 • placidindustries.com